

SnowDogg™ Snowplow Headlight Adapter

INSTALLATION INSTRUCTIONS 16071110

GM 8 Position Plow Prep/Upfitter Breakout Connector

INSTRUCTIONS

1. Find the existing 8 position breakout connectors. These should be located near the headlights on both the passenger and drivers side of the truck. They do NOT connect directly to the headlights. Disconnect both PS and DS connectors.

2. Connect the 16071110 adapters to the OEM headlight side connectors and truck side connectors. No additional wiring or splicing is required.3. Check all light functionality before operating the plow.