

SnowDogg® Snowplow Headlight Adapter


INSTALLATION INSTRUCTIONS

16071340

2023+ FORD SUPERDUTY IN-LINE LIGHT CONNECTOR ALL TRUCKS

INSTRUCTIONS

1. Check all truck light functionality before beginning the install.
2. Locate the in-line light connector above the passenger side wheel well. This can be accessed by removing the wheel well cover or by removing the air filter.
3. To access through the top
 - a. Remove the air filter and air filter cover

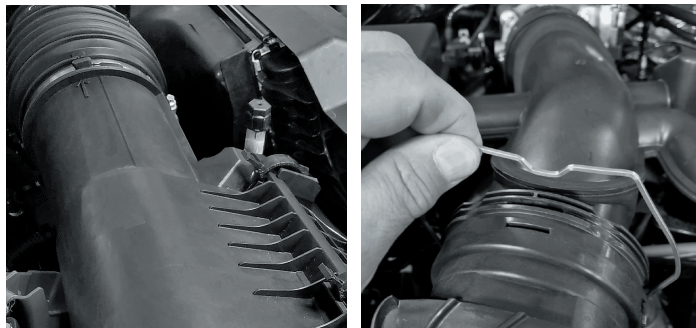

- b. Remove the air filter housing



- c. Remove the exposed bracket to reveal the in-line connector



4. Separate the connectors (there may be a small zip tie that needs to be cut)
5. Install the 16071340 adapter into the in-line connectors
6. Route the other end of the adapter to the RELAY MODULE (16160100/16160102) and connect A+B connectors.
7. Attach the red/white wires with male and female quick connects between the RED/ WHITE and ORANGE wires between the relay module and control harness.
8. Check all light functionality with plow disconnected to verify that it matches step 1.
9. Connect the plow lights and verify light functionality.
 - a. Plow marker lights will be on with truck ignition
 - b. 16160700A plow lights will dual burn when truck high beams are active.
10. Re-assemble the bracket and air filter components.