


Mounting Instructions

B-Pack Toolbox

It is recommended to mount the toolbox 3" min. from truck cab.

Check tightness of fasteners periodically.

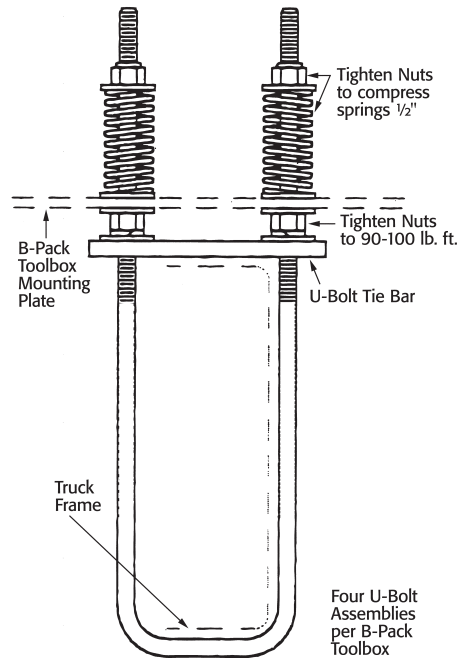


3008072 Rev. B

Mounting Instructions

B-Pack Toolbox

It is recommended to mount the toolbox 3" min. from truck cab.

Check tightness of fasteners periodically.

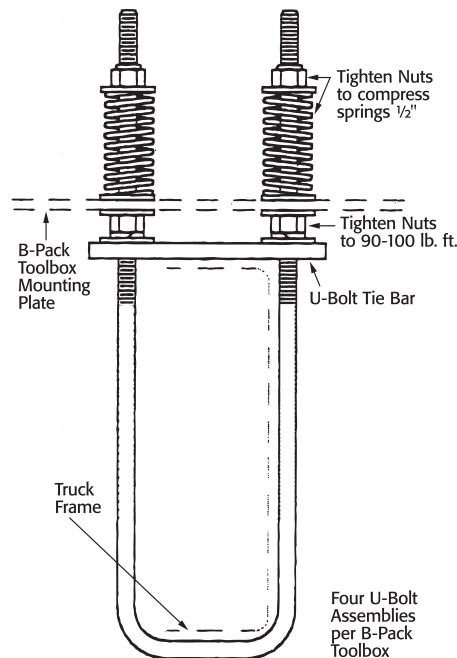

3008072 Rev. B